



6 PERSON RAPID TENT

ITEM# RSRT-6

10 FT. x 10 FT. x 78 IN.

A MESSAGE TO OUR CUSTOMERS

Thank you for purchasing a quality product manufactured by Caddis Sports, Inc. We pride ourselves in delivering quality, customer friendly products. Please visit our authorized retailers for many quality products to suit your needs from Caddis Sports, Inc. As a valued customer, your satisfaction is very important to us. We welcome your feedback and await your responses, suggestions and recommendations. Email us via customer-service@caddissports.com.

We advise you to assemble this product at least once at home before going on a trip. Obtaining a familiarity with the assembly and disassembly processes will help ensure your satisfaction and what concerns you may have, should you find yourself setting up in the dark or adverse weather conditions.

Get the most enjoyment from your product by reading this Owner's Manual thoroughly; then follow our camping suggestions outlined below. Note the symbol we use and why:

Calls your attention to proven suggestions collected from our camping expertise and will enhance your experience.

IMPORTANT NOTICE

You may compromise the original fire retardancy and water repellency protective coatings when you apply sprays or other chemical treatments to your tent.



DO NOT
SPRAY

This fabric has been factory-treated and is highly water-repellent; however, it is not waterproof. All tents can experience seam leakage during wet weather. If you desire additional moisture protection, use a seam sealing compound only; be sure to follow the manufacturer's directions. We recommend sealing your tent during your initial setup and prior to each camping season. Seam sealer compounds can be purchased at your local camping products retailer. For more information, please refer to our website, www.caddissports.com or contact our Customer Service Representatives via customer-service@caddissports.com.



This Fabric is Not Waterproof!

Your product's fabric is a synthetic material that has been treated and is not only highly-resistant to the sun's Ultraviolet (UV) light but also highly water-repellent in light rain conditions. Insure a

successful and enjoyable camping experience by heeding the following tips:

- Keep objects from touching the inside, as objects will "draw in" moisture at the point of contact.
- "Prep" your product where necessary with a recommended seam sealing compound - refer to the seam sealing information in DO NOT SPRAY section of this Owner's Manual.

Important: Prolonged exposure to sunlight that causes UV damage and/or the use of non-recommended foreign substances on synthetic material may damage the fabric properties and is not covered by the limited warranty.



STRUCTURE

Our recreational products are constructed using customer specifications. However, they are not engineered for extreme weather climates or environments. Modification, abuse and inclement or "surprise" weather conditions may make additional

precautions necessary. Here are some tips should you find yourself preparing for adverse conditions:

Make sure any guy lines/ropes on your structure are well-secured in the ground and lines/ropes are sufficiently "taught" between structure and stake; adjust where needed. Facing periods of heavy winds? Secure tent loops and guy lines/ropes with extra stakes if necessary.

Check the corners of the roof fabric and make sure roof line is properly positioned on framing. Use all provided methods of securing your fabric to its framing: nylon fastener strips, ties and guy lines/ropes where located. Storms or steady rains may collect in water pockets on the roof line. Water adds weight and weight weakens the overall structure. Avoid possible collapse by maintaining a watchful eye and removing any water accumulation that may occur.



FIRE

WARNING: Keep all flame and heat sources away from this product fabric. This fabric is not fireproof! It is made with flame-resistant fabric, which meets CPAI-84 specifications. The fabric may burn if left in continuous contact with any flame source. The application of any foreign substance to the fabric may render the flame-resistant properties ineffective.

Do not erect near and open flame. Never use any fuel burning, oxygen consuming devices, or any device that produces flames - including, but not limited to: cooking stoves, lanterns, candles, hibachis or heaters - in or around your product. Inhalation of fumes may result in carbon monoxide poisoning, injury and/or death.



CARE & STORAGE

Your product is not machine washable. Your product is not machine dryable. One of the easiest ways to damage your product is storing it while wet. If you must close camp in the rain, follow these guidelines carefully:

- As soon as possible: Open your product and ensure that every area of fabric is clean and completely dry before rolling up for storage.
- If necessary, hang product outside or loosely drape over a ladder in your garage or spare room for a few days, turning it inside and out to prevent trapping pockets of water or debris.
- Use a soft brush to wipe away surface dirt.

To clean your product: Hand wash using a mild dish washing soap and soft bristle brush, then allow the fabric to completely air dry.

Don't neglect the frame: Wipe down all parts - steel, plastic and fiberglass - before putting away for next season's use. Salts from ocean air can and do affect damage if not dealt with as quickly as possible.

Storing wet fabric for as little as 24 hours in warm weather is likely to cause fabric to mildew. Once mildew sets in, the stains are permanent. Stains cannot be removed without potential harm to the fabric's coatings; chemicals or cleaning agents used to remove dirt and stains may do irreversible harm to the fabric.

Salts, mildew, other causes and subsequent effects are not considered a manufacturer's defect.

WARNING: This product contains chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.



6 PERSON RAPID TENT

ITEM# RSRT-6

10 FT. x 10 FT. x 78 IN.



THIS RECREATIONAL PRODUCT REQUIRES TWO PEOPLE TO ASSEMBLE.

- Unless otherwise specified all instructions will be given assuming the assembler is facing the front opening of the tent.
- Carefully fold out your poles, using caution to prevent snapping the shock-cording. Make sure each pole segment is "seated" into the next section before flexing the pole during set-up.
- Do not drop tent bag or pole bag. Do not bounce tent bag on its end to remove tent as these actions may damage the shock-cord and/or pole ends.
- Always store tent in the carry bag. Do not drag or push tent across tough surfaces as it will cause extra wear and may puncture the floor, even when folded.


STEP 1: Verify Package Contents

Verify package contents by emptying contents of bag(s) and confirming all parts are included and undamaged.


TIP: Do this at home before you leave on your trip.

STEP 2: Assemble The Tent

A) Select a smooth level site and spread out your tent.

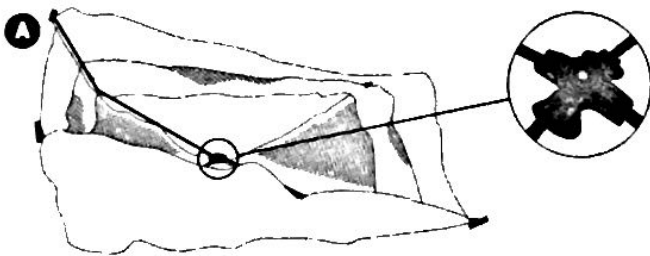


B) Lift each corner into position and locate the legs on the ground.

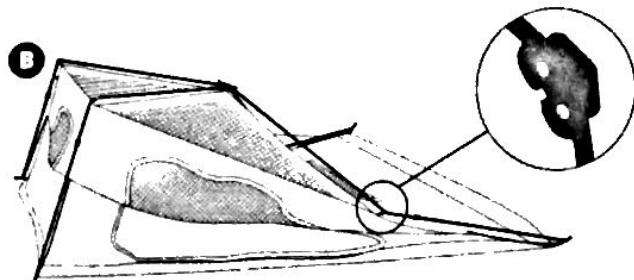

STEP 2 CONTINUED

C) Raise the tent. Extend each telescoping leg until they snap into place.

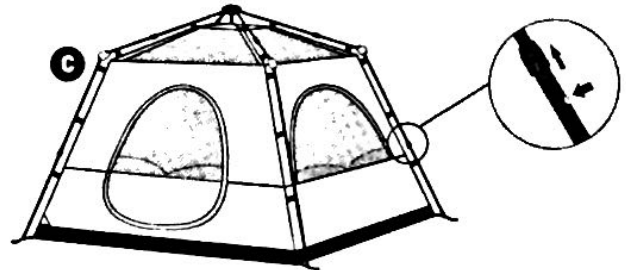


STEP 3: Attach the Rainfly

A) Drape the rainfly over tent. Rainfly should be centered over the tent.

B) Attach rainfly to poles by pulling the S-hooks down to the Pin-Rings on pole.

C) Reach under fly and secure fly to tent by wrapping nylon fasteners, located on underside of fly, around tent pole. Insert the fiberglass pole into sleeve of the rainfly.

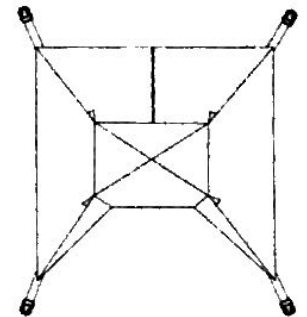

STEP 4: Stake the Tent

A) Stake tent by driving stakes through the webbing loops on base of tent.

B) To secure guy lines, find the guy line plastic slider and look for the portion of the line opposite the knot. Pull this portion, forming a loop (works like a slip knot), extend guy line to ground and stakes. Repeat with remaining guy lines.



DISASSEMBLY INSTRUCTIONS

- Make sure all doors are zipped nearly closed, leaving space to allow air to escape when repacking.
- Store all Poles and Stakes in their corresponding Bags to prevent and possible tearing or damage to the fabric piece(s).

STEP 1: Remove the stakes.

STEP 2: Remove and fold fly.

STEP 3: Release the telescopic legs by pushing the lock buttons.

STEP 4: Collapsing the telescoping legs upward on the roof.

STEP 5: Fold the arms upward until the tent stands upright with the hub assembly at the top.

STEP 6: Place the tent and accessories (if included) in the carry bag for storage.